



Push-Fit Instructions



- Cut the hose cleanly and square. No hacksaws, just a sharp knife.
- Firstly remove the blue collet clip from the push-fit.
- No inserts are required on 6mm and 10mm hose.

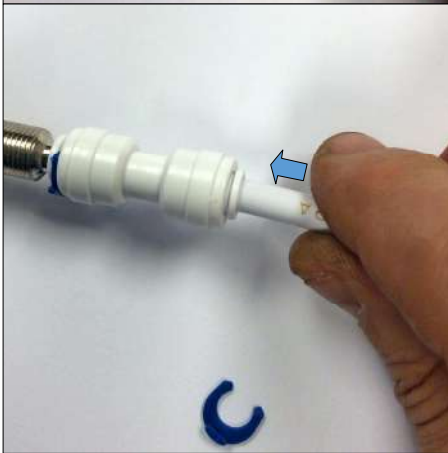

- Push the hose firmly into the white collet of the push-fit fitting until it stops.

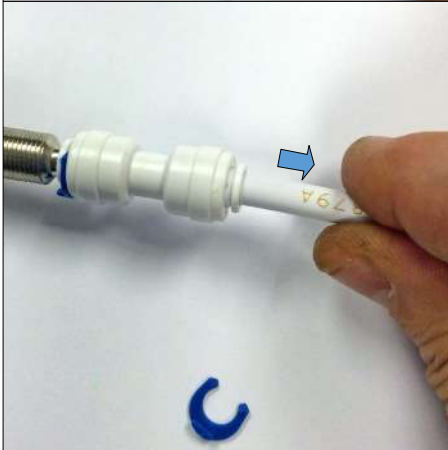

- Pull the hose back out of the white collet to lock it in to place.



- Lastly put the blue collet clip in place with the tab facing away from the push-fit fitting.
- To release the hose, firstly remove the blue collet clip and then push the white collet in and simultaneously pull the hose out.